


# Midi settings


## Configure




To configure a midi device, you have to select all of these values:

- midi input
- midi output
- midi channel




Manage

 Refresh midi devices

Midi input	Midi output	Midi channel
Pulse2 	Pulse2 	1 

[More options >](#)

 Remove device *Remove Waldorf Pulse 2 from your synthesizers list*

Midi tools (eg. Monitor, Backup, etc) are displayed on screen only when device is set correctly and available to your browser (a midi device may not available if it is used in another program, eg. DAW)

Revision #3

Created 28 December 2021 22:58:18 by TJ

Updated 24 January 2023 22:14:33 by TJ