


# Remove device

Removing a device cannot be undone and disables access to associated data (Files, Banks, etc.)

To remove a device:

- Expand the **More options** section:

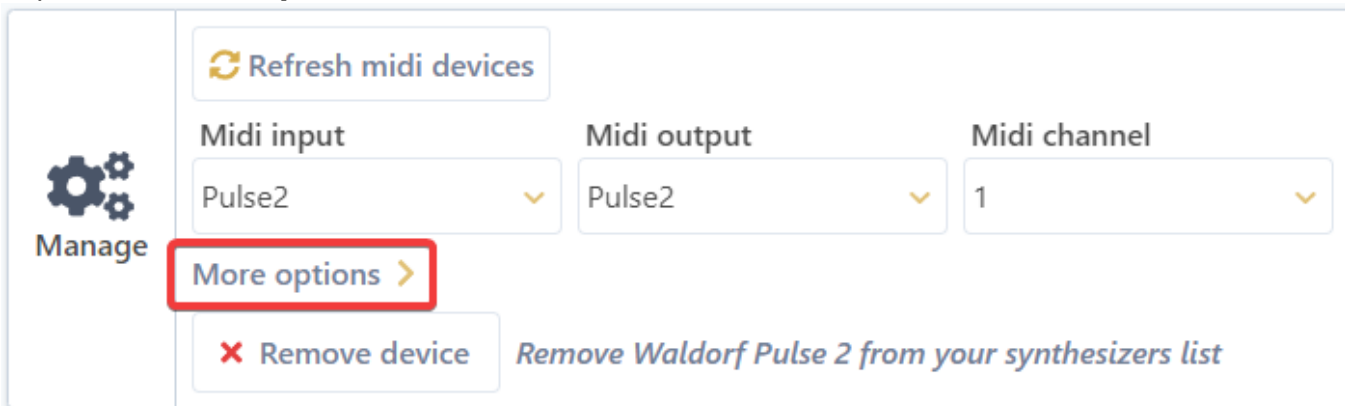

Manage

Refresh midi devices

Midi input: Pulse2


Midi output: Pulse2

Midi channel: 1

More options >

Remove device *Remove Waldorf Pulse 2 from your synthesizers list*

- Click the **Remove device** button
- A validation screen appears, click **Confirm** to remove the device.

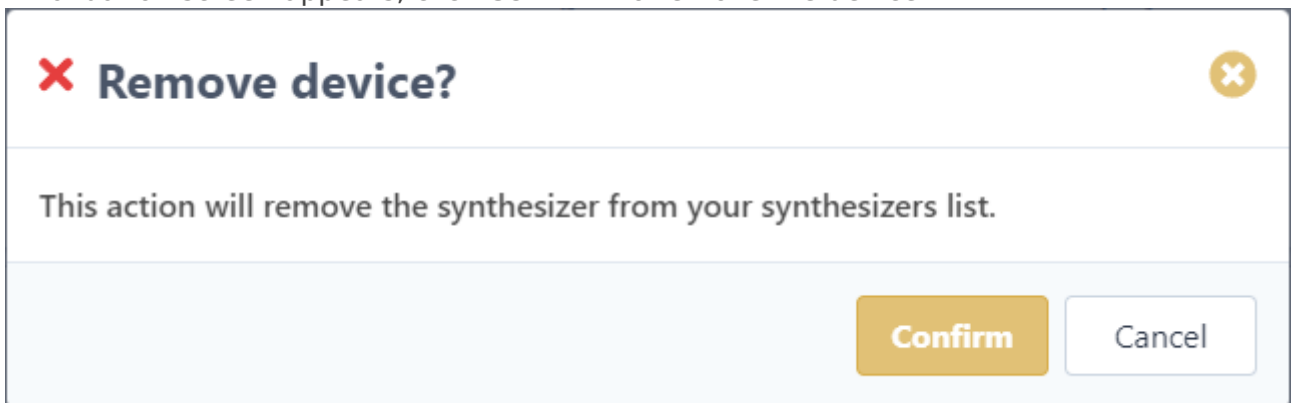

**Remove device?**

This action will remove the synthesizer from your synthesizers list.

Confirm Cancel

Revision #6

Created 28 December 2021 22:58:37 by TJ

Updated 25 January 2023 01:02:39 by TJ